

RUSTIC REDWOOD SPARROW HOUSE

Your Kit contains:

- 1 container of nails & 2 screw-eyes.
- 1 perch ($\frac{3}{8}$ " diameter x $3\frac{1}{2}$ " long)
- 1 hanger wire
- 1 "FRONT" (with holes) 

- 1 "BACK" (same as "FRONT" without holes.)
- 1 "BOTTOM"
- 2 "SIDE's" (LEFT & RIGHT)
- 1 "SMALL ROOF"
- 1 "LARGE ROOF"

All pieces are marked. The "INSIDE" of each piece is also marked. Some pieces have one or more edges marked and these will be mentioned in the following assembly instructions. If you put them together correctly, none of these marks will show.

Small holes are drilled to guide the nails. If you follow all the steps correctly, all the drilled holes will line up.


CAUTION!! Don't let Daddy help you until he has read these instructions carefully.

STEP 1 Use 4 nails to attach the "FRONT" to the "FRONT END" of the "BOTTOM." (REMEMBER! the surfaces marked "INSIDE" are to be inside the house.)




STEP 2 In like manner, use 4 nails to attach the "BACK" to the "BACK END" of the "BOTTOM."

STEP 3 Use 9 nails to attach the "LEFT SIDE" to the appropriate edges of the "FRONT," "BACK" & "BOTTOM." Note the edge of "BOTTOM" which is marked "LEFT." Watch all markings to attach properly so that markings will not show and nail guide holes will line up. Also, all bevels and slopes should match.

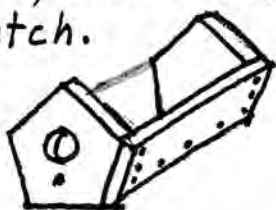

STEP 4 Use 9 nails to attach the "RIGHT SIDE" in the same manner.

STEP 5 Use 6 nails to attach the "SMALL ROOF" in the location marked "SMALL." you should be used to following the markings and lining up the nail guide holes by now. The edge marked "PEAK OF ROOF" goes at the tippety top. The peak should be even (flush) with the peaks of the "FRONT" and "BACK."

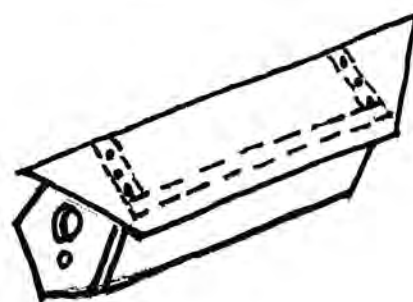

STEP 6 Use 9 nails to attach the "LARGE ROOF" in a similar manner. DO NOT put nails in the two holes with circles around them.


STEP 7 Place black end of perch ($\frac{3}{8}$ " diameter dowel) in small hole underneath the front door. Tap gently with hammer to force perch into hole until all the black disappears. Do not tap too hard or the perch will go in too far.

STEP 8 Screw a screw-eye into each of the two holes in the roof with circles around them. (one on each slope near the peak on opposite ends.)

STEP 9 Hook the ends of the hanger wire into the screw-eyes.

STEP 10 Finish with Redwood Stain or leave natural. Do not get stain inside hole for doorway.

STEP 11 Hang your Rustic Redwood Sparrow House in a tree outside your window. Watch the sparrows carry nest-building materials to it in the Springtime.

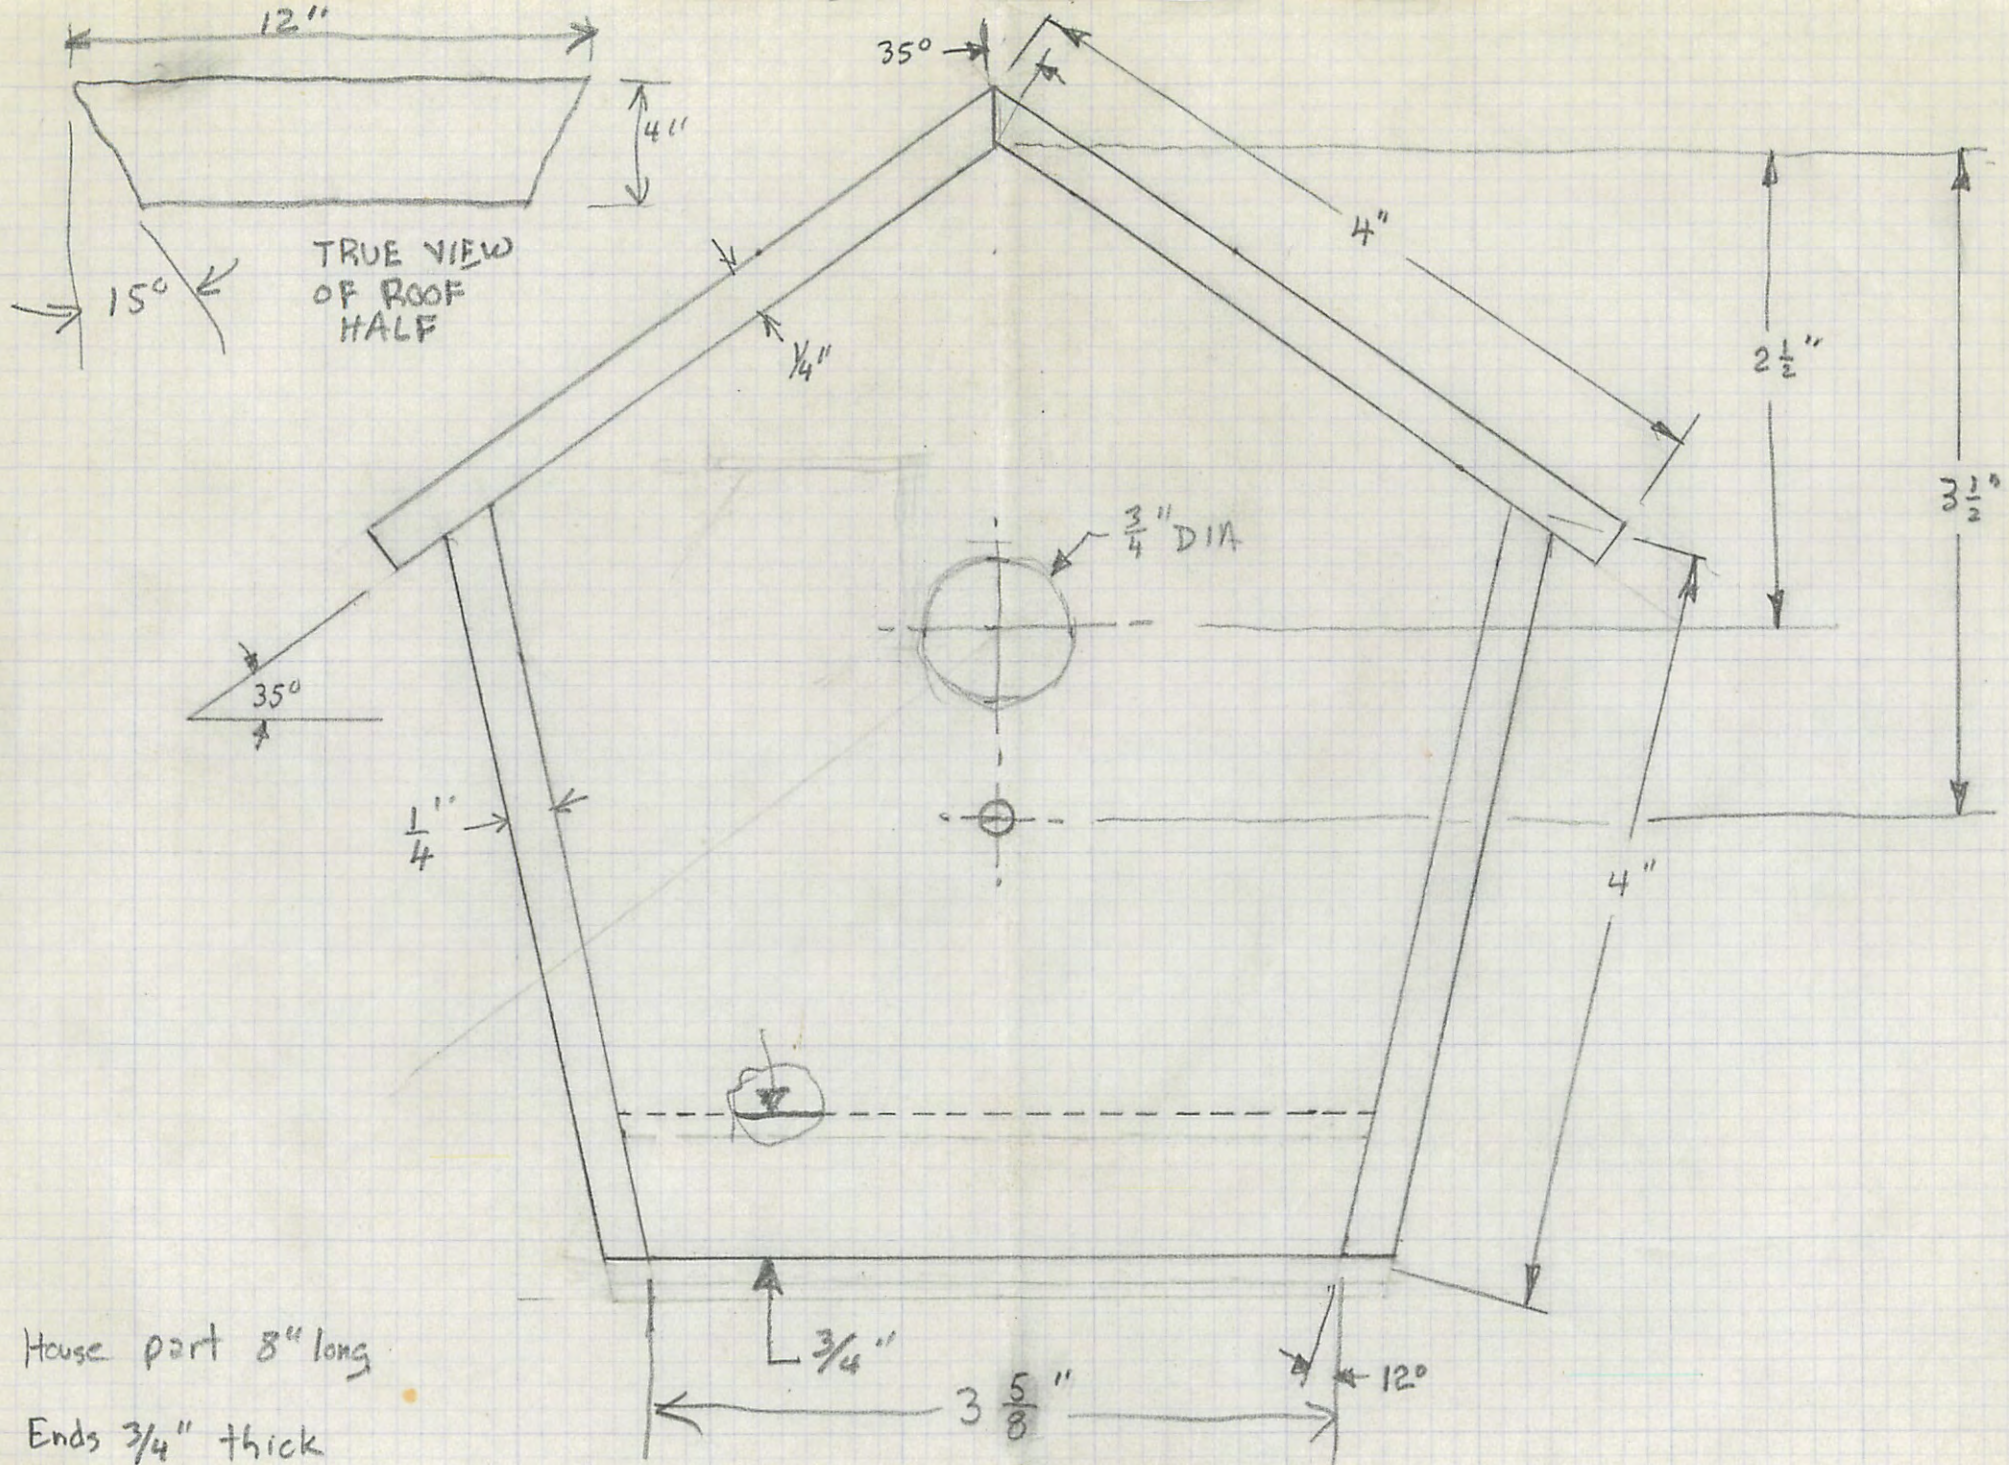



House part 8" long

Ends 3/4" thick

BIRD HOUSE KIT


Use red dimension if sides are $\frac{3}{4}$ " thick.

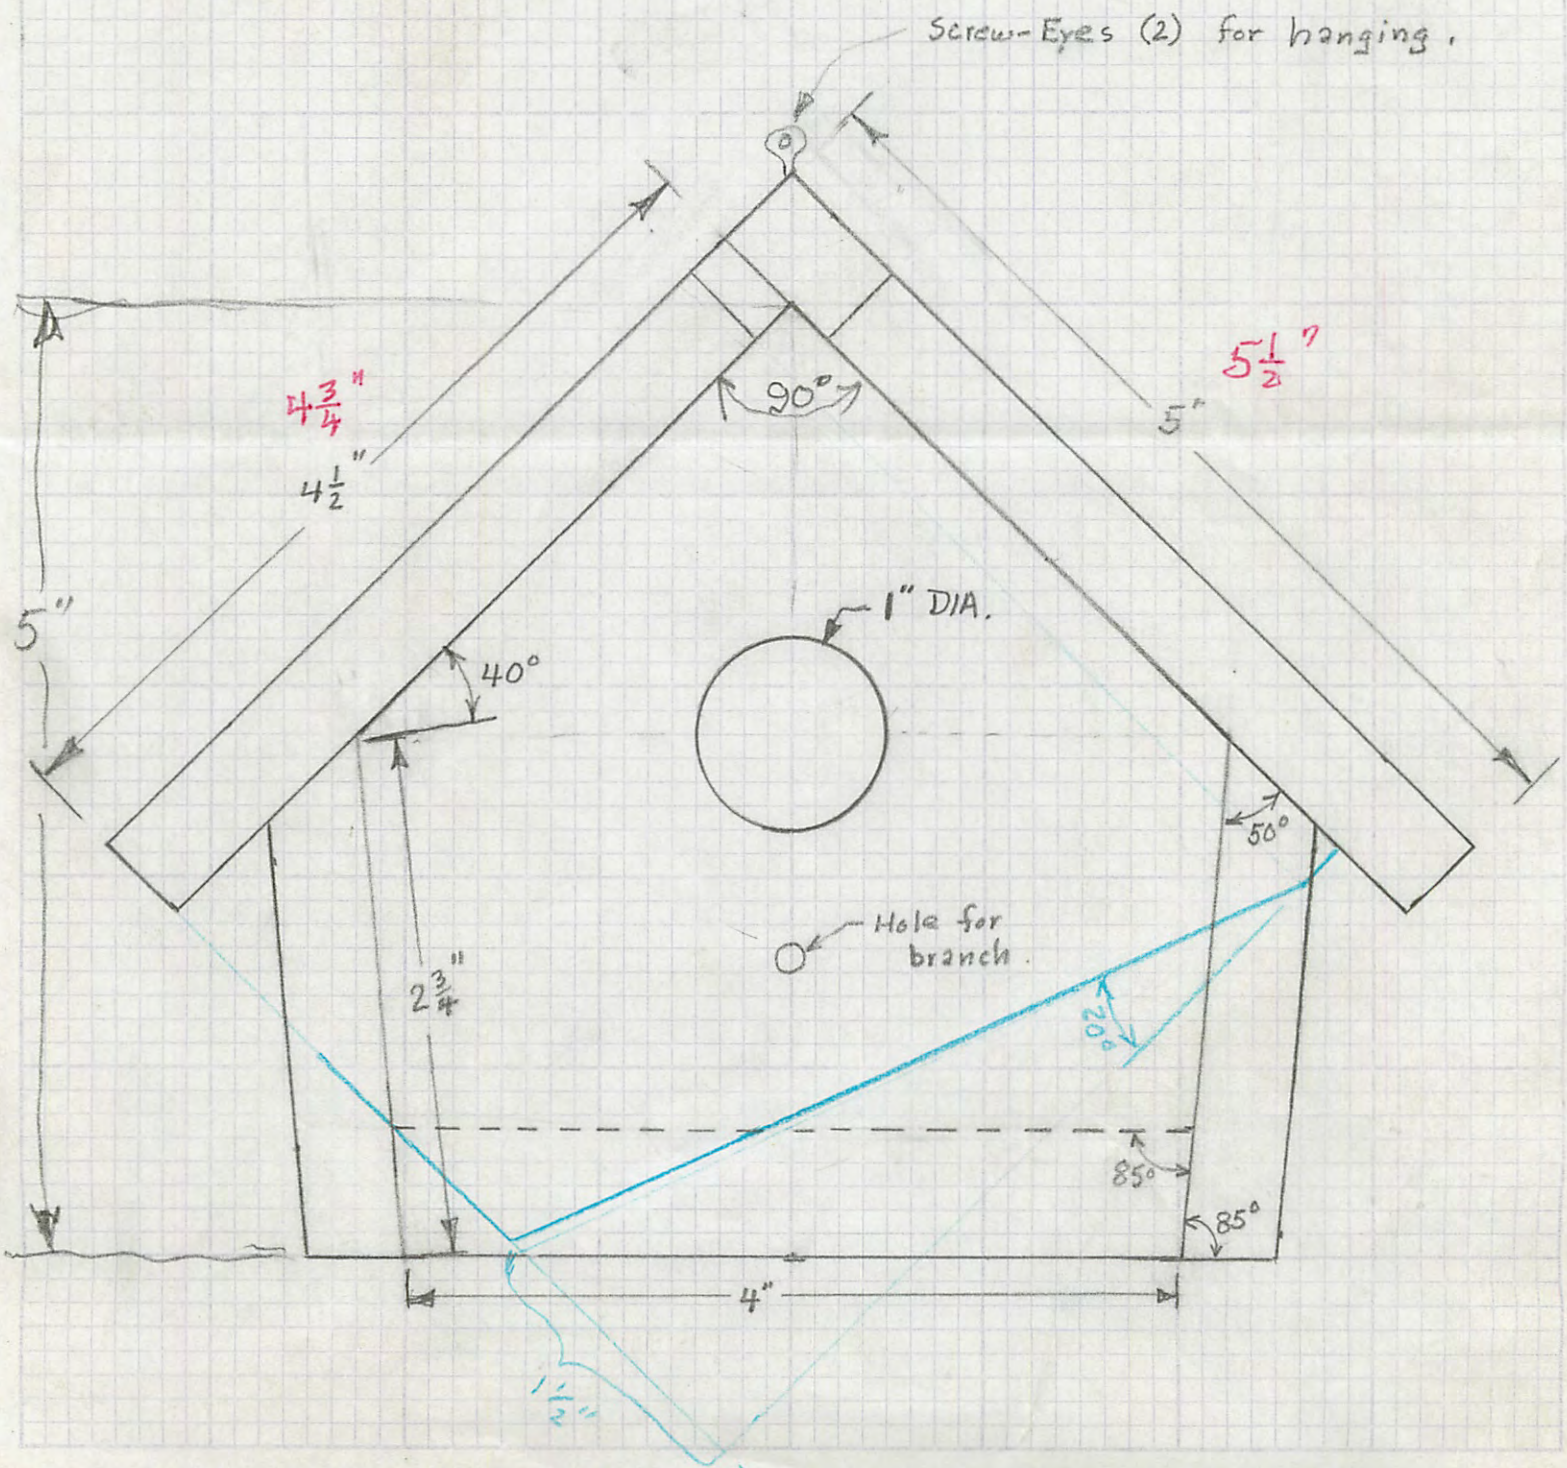

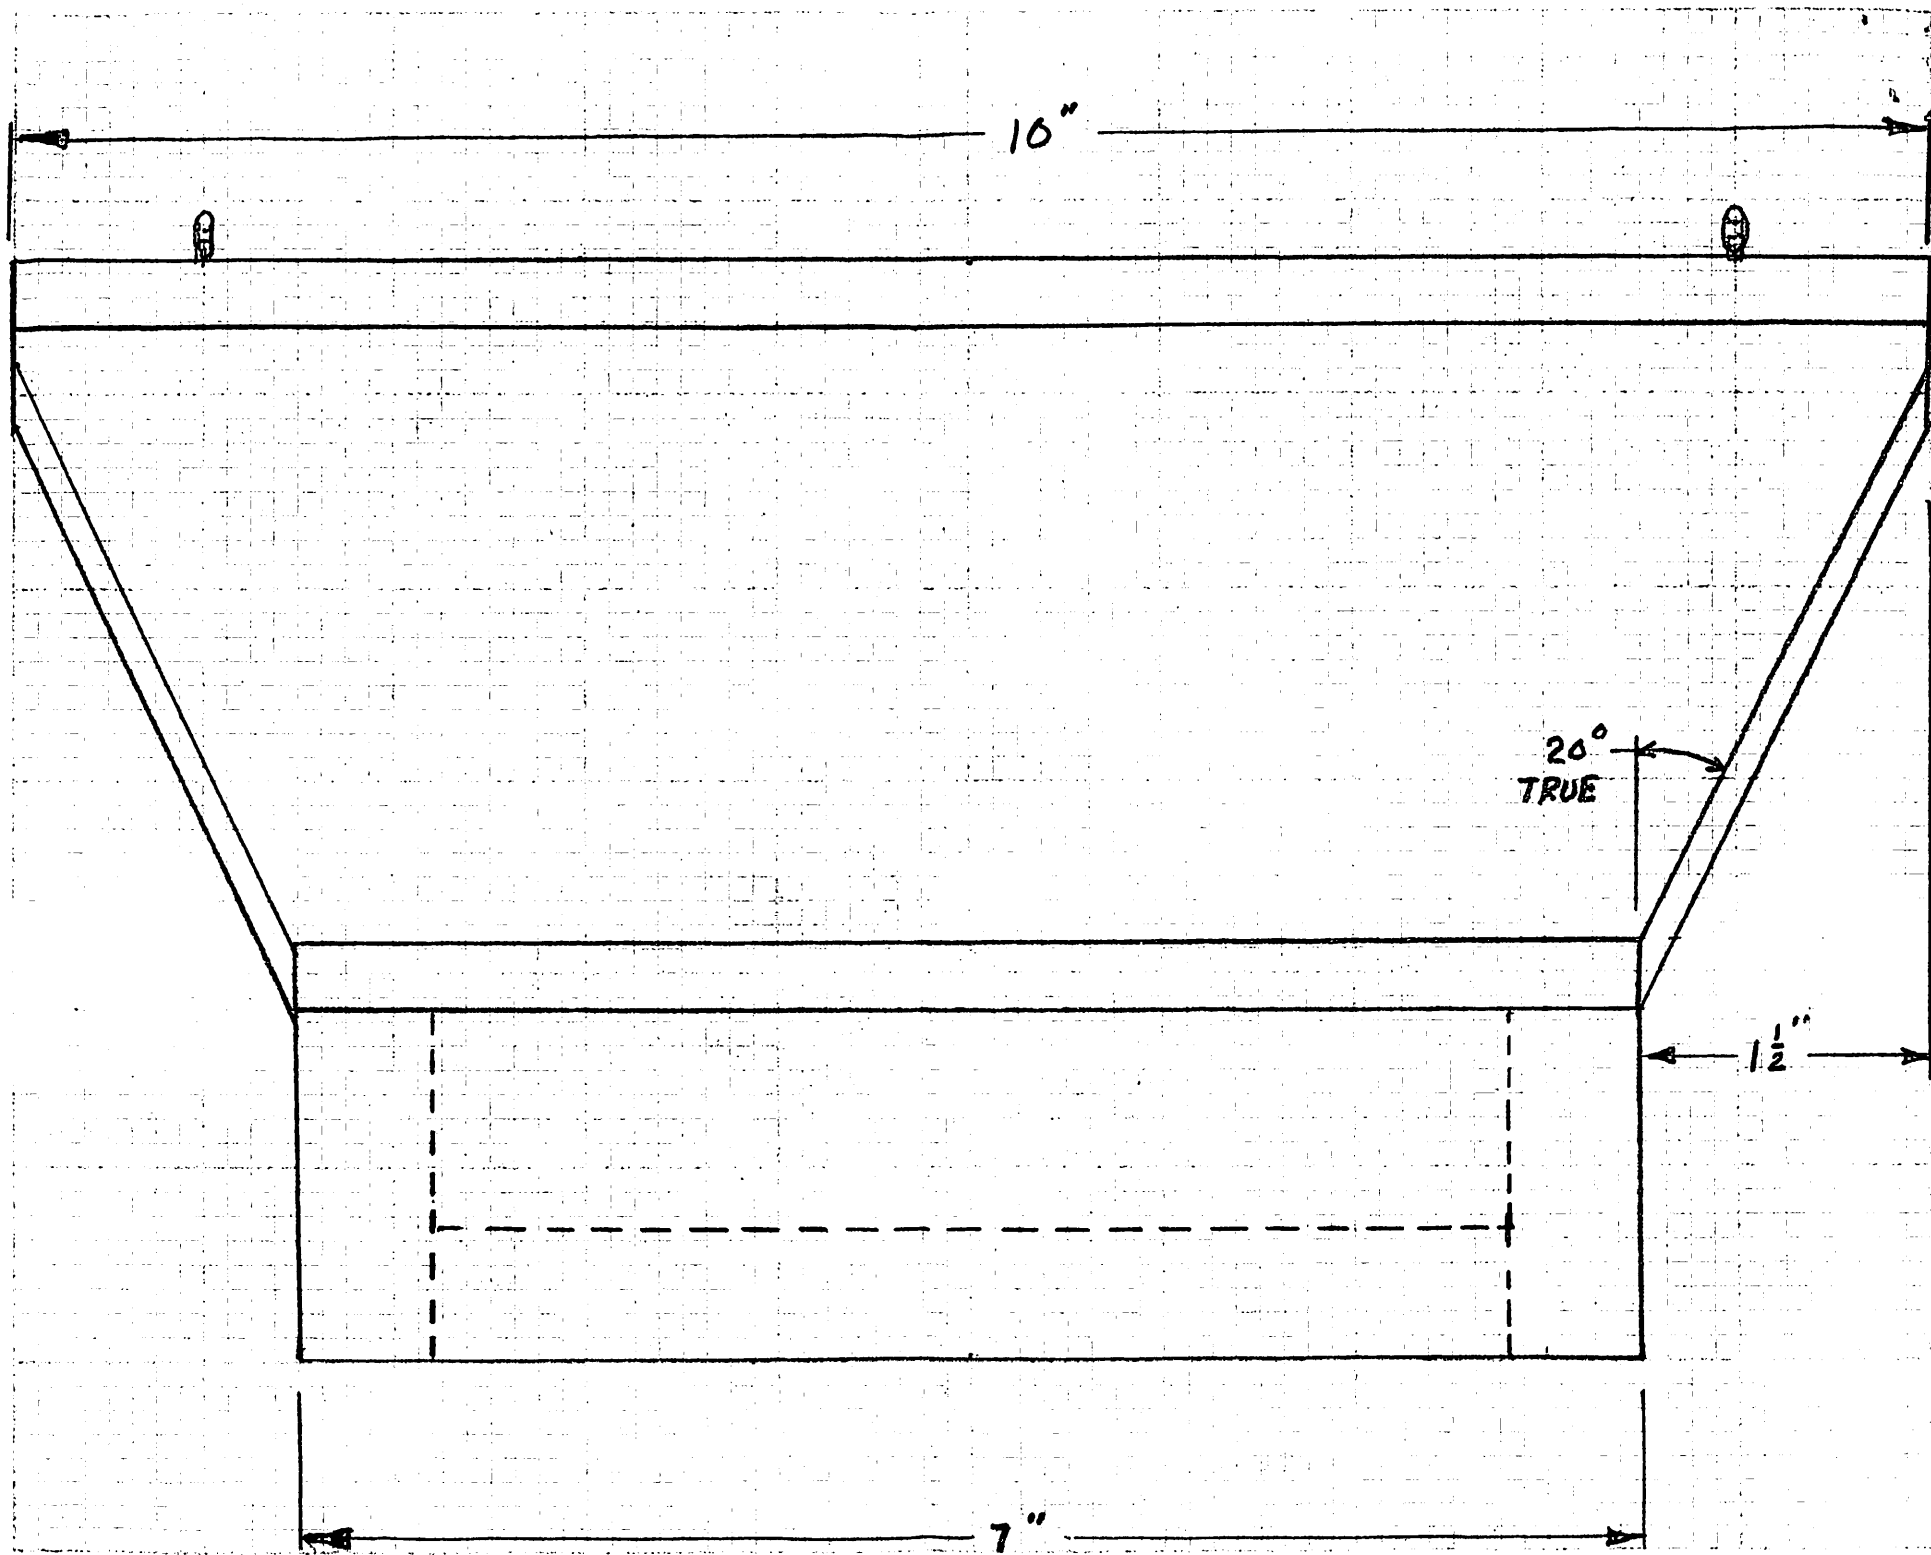


I

The proper lab

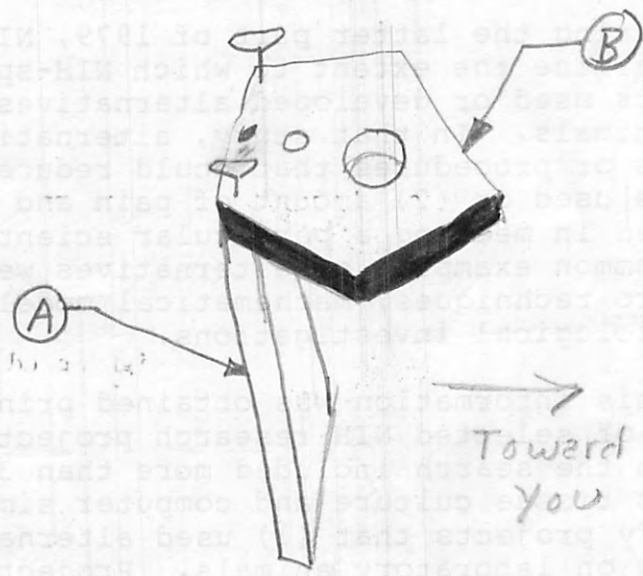

1. Place the ~~floor~~ ^{FLOOR} ~~that~~ (A) on end as shown with black ~~end~~ ^{end} up and surface marked "INSIDE" toward you
2. Place ~~front~~ ^{FRONT} ~~wall~~ (B) on top as shown with ~~surface~~ surface marked "INSIDE" facing down and black band on that surface against black end of FLOOR (A)
3. ~~Insert~~ two GUIDE PINS in outside holes to line up holes in two pieces,
4. NAIL middle hole.

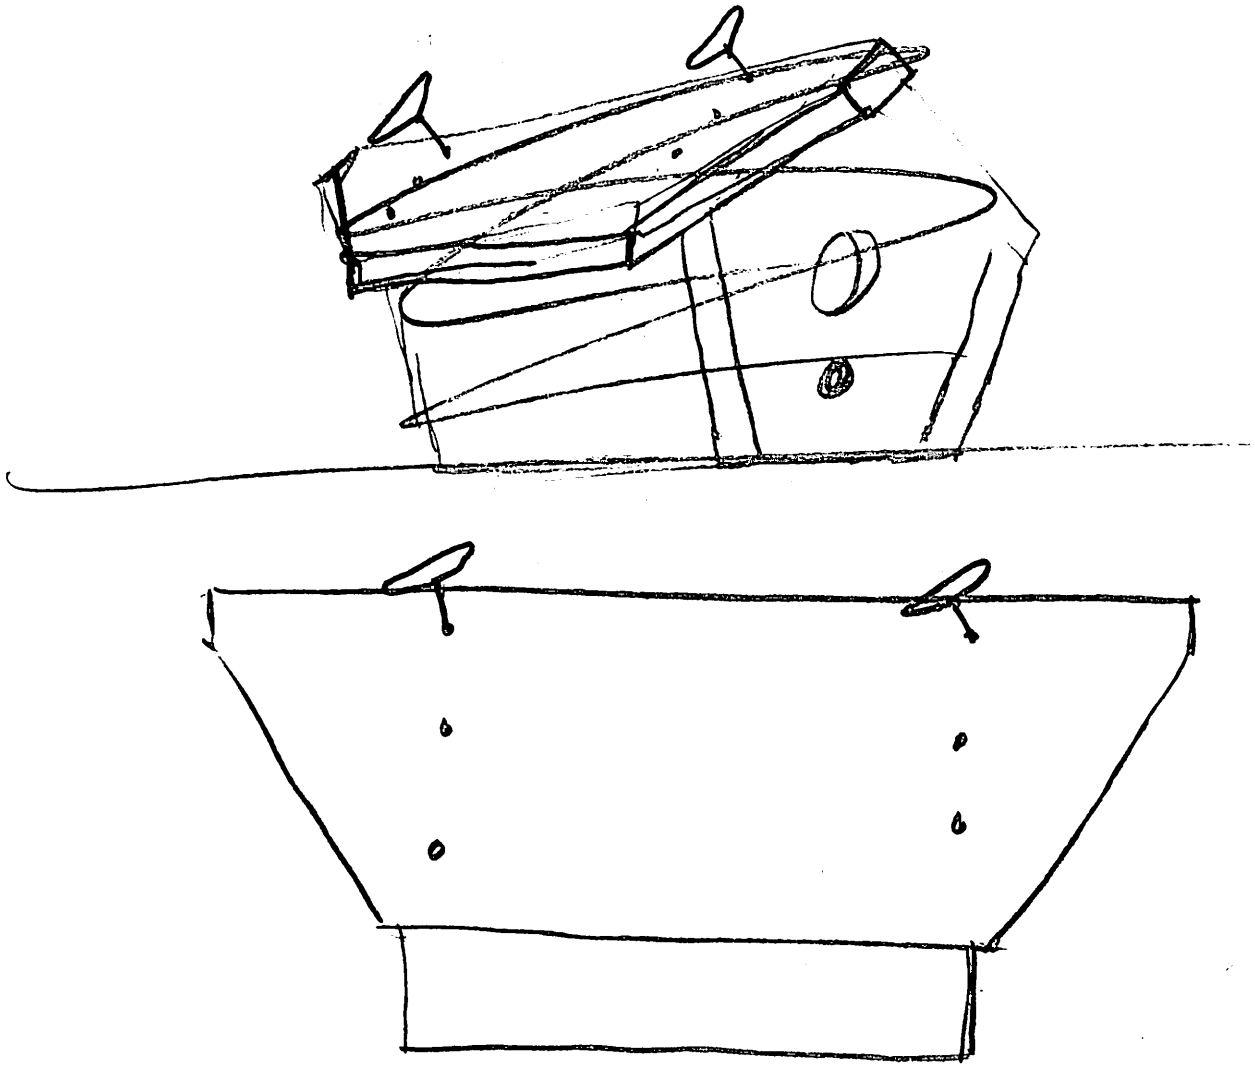

12. Place ROOF (F) in position ^(as shown). Be sure black end is Toward black end and orange end Toward orange end.


13. Insert ~~2~~ ⁴ GUIDE PINS to align top holes as shown.

14. NAIL other ~~4~~ ⁴ holes.

15. Remove GUIDE PINS and nail top 2 holes.

16. Put next on house.
17. Install ROOF (G) the same way.

18. Use SANDPAPER to sand bird house smooth.

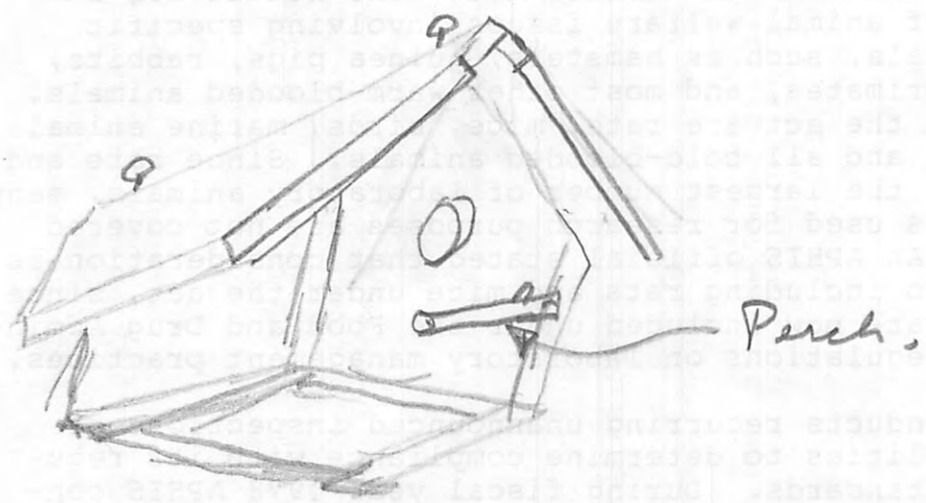

19. Borrow some of Mommie's WHITE GLUE and squirt a little in perch hole.
20. Push whittled end of perch into hole.
21. Put a lot of newspapers on patio and ~~and~~ paint the bird house. Do not paint perch or inside the hole.
22. Hang in a tree with wires through the eyes in ROOF. Put it high enough so children won't bother it. Have Mommie help you.

← 1" hole

← $\frac{1}{4}$ " hole

← 1" hole

← $\frac{1}{4}$ " hole